 




# SIGNATURE SERIES INTIMIDATOR BLIND

*Instruction and Safety Manual*

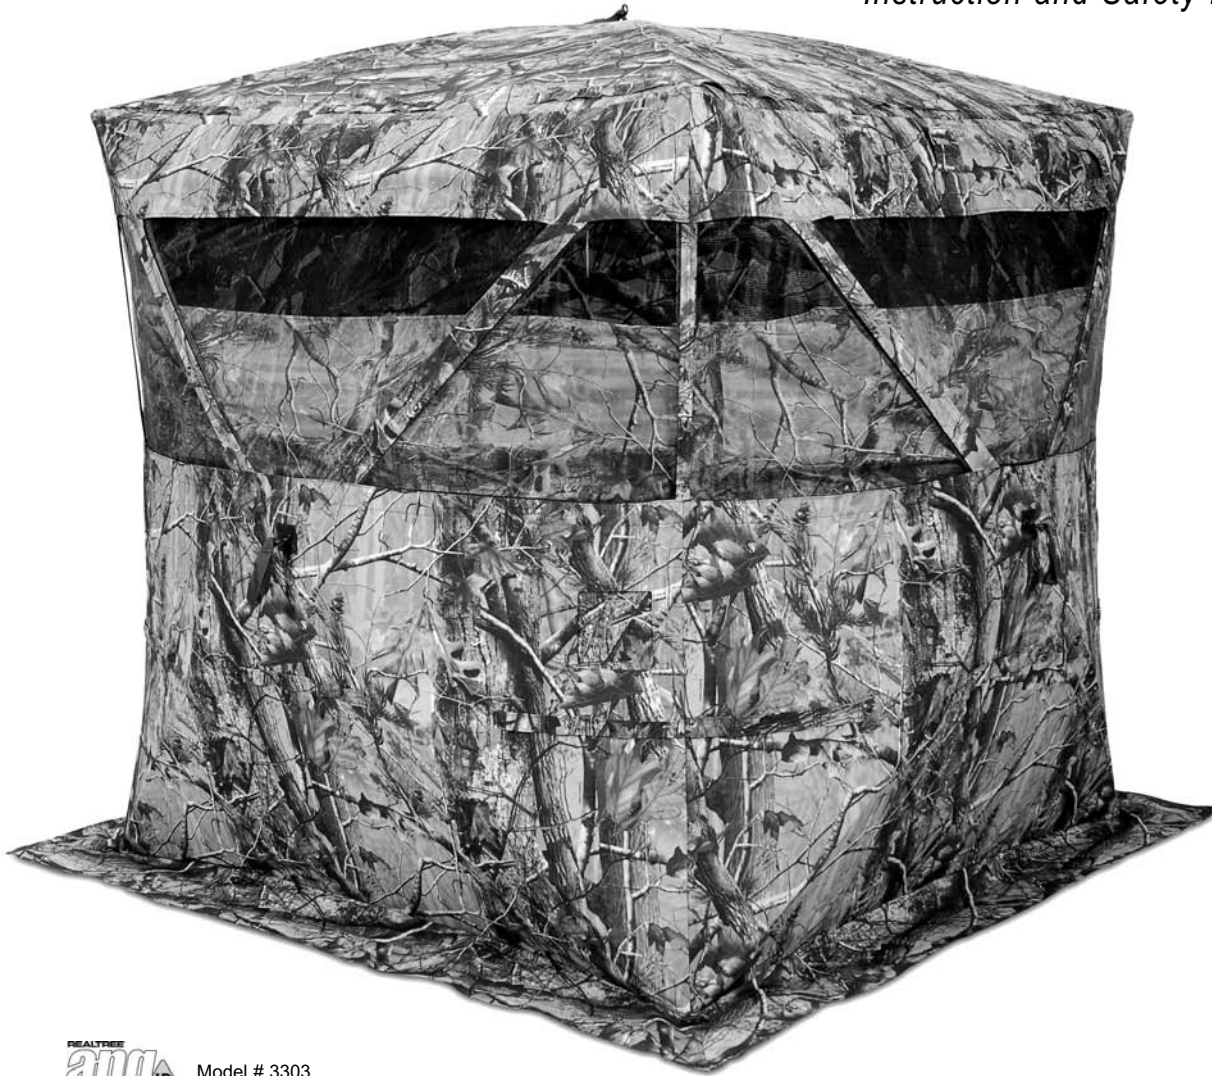

Model # 3303  
Realtree® All Purpose Green HD™



Model # 3304  
Realtree® All Purpose HD™



**Be sure to follow these guidelines for using your Product.  
READ AND UNDERSTAND ALL INSTRUCTIONS and WARNINGS FIRST**



**! CHOKING HAZARD - MAGNETS ENCLOSED.** Keep Small Parts Away From Children. Do Not Ingest or Inhale Magnets. Attraction of Magnets in the Body May Cause Serious Injury and Require Immediate Medical Care.

Any questions or confusion regarding the use of this product contact our Customer Service Department.

 
©2008 (rev 4/08)

**PARTS LIST**

- 1 *Signature Series* INTIMIDATOR Blind
- 1 Bow Holder
- 1 Accessory Shelf
- Removable Floor
- 1 Camo Backpack w/Padded Shoulder Straps and Bow/Gun Attachment
- 8 Shoot-Through Mesh Windows
- 1 Window Curtain System
- 10 Tent Stakes
- High Wind Tie-Downs

**Step 1:** Remove blind from back pack.

**! CHOKING HAZARD - MAGNETS ENCLOSED.** Keep Small Parts Away From Children. Do Not Ingest or Inhale Magnets. Attraction of Magnets in the Body May Cause Serious Injury and Require Immediate Medical Care.

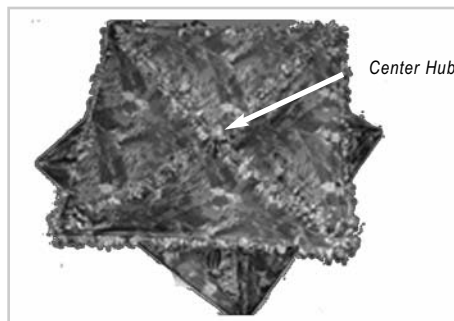**Step 2:** Firmly pull center hub of the roof so the top pops up.**Step 3:** Lift the top of the blind so that you have access to the center hub pole of one of the walls. Firmly pull the hub pole until the wall pops out.**Step 4:** Continue around the blind, pulling the hubs one at a time, until all but the door side hub is extended.**Step 5:** Use stakes to secure blind to the ground.**Step 6:** Adjust windows.

Add Native Brush to Stubble Pockets to optimize your camouflage.

**360° SHOOT-6 VIEW**



**! Tip** Be sure to remove any native brush, dirt, and debris **BEFORE** folding down to prevent damage.

**Step 1:** Exit Blind, **ZIP ALL WINDOWS SHUT** and remove all ground stakes. Store them in the pouch provided.

**Step 2:** Make sure **DOOR IS ZIPPED SHUT**.



**Step 3:** With an open palm, push center hub of one of the walls until the tension begins to give. (as shown left)

**Step 4:** Repeat Step 3 on remaining walls. Once all walls have been pushed in, the Blind will collapse onto the ground.



**Step 5:** With an open palm, push center hub pole of roof until tension gives.



**Step 6:** The Blind should now look like above.



Hubs

Soft Ends

**Step 7:** Gather all corners of the blind. Once all the corners are gathered, place blind into backpack with **HUBS AT THE BOTTOM & THE SOFT ENDS AT THE TOP**.



Backpack w/padded shoulder straps & Bow/Gun Attachment  
\*\*Hunting Equipment Not Included\*\*



 
Bow Holder



Removable Floor



Accessory Shelf

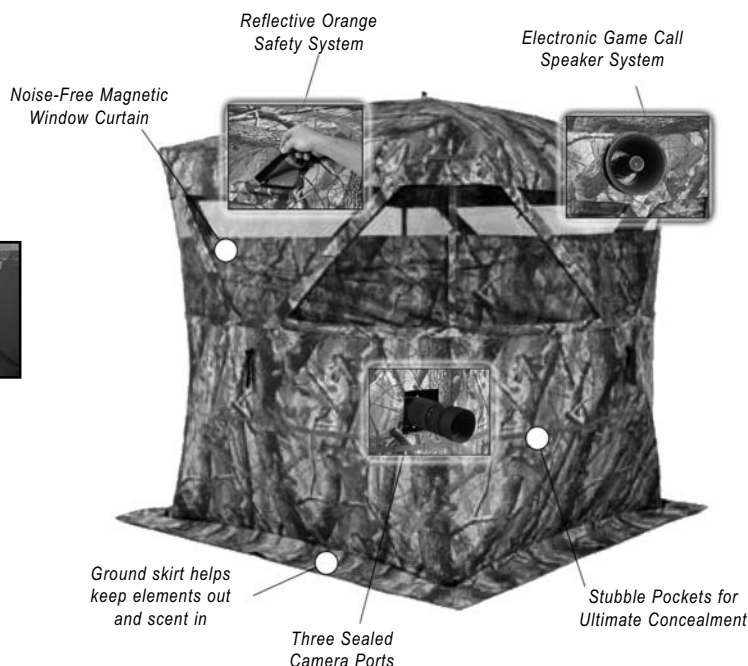

## STORAGE TIPS

- Store your Blind in a cool dry place - free native brush, dirt and any debris
- Never store your Blind wet or damp
- Avoid leaving your Blind outdoors for extended periods of time as it will cause unnecessary fading of the material if left in direct sunlight.
- To stop any leakage, use seam sealer on all seams and silicon spray on seams/sidewalls.
- To store your TSC windows, avoid wrinkles and creases that could significantly reduce visibility.
- To aid in folding blind, remove the floor and window curtain is all the way up

## CPAI-84 WARNING

### **⚠ WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM TENT FABRIC.**

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. This tent is made of flame-resistant fabric. It is not fireproof. The fabric will burn if left in continuous contact with a flame source. DO NOT use candles, matches or open flames of any kind in or near a tent; DO NOT cook inside a tent; DO NOT smoke in a tent; DO NOT store flammable liquids inside a tent; build campfires downwind and several meters away from a tent and be sure to fully extinguish campfires before leaving a campsite or before retiring for the night; exercise EXTREME caution when using fuel-powered lanterns or heaters inside a tent and use battery operated lanterns whenever possible; DO NOT refuel lamps, heaters or stoves inside a tent; extinguish or turn off all lanterns before going to sleep. The application of any foreign substance to tent fabric may render flame resistant properties ineffective.

## **⚠ Warning ⚠ Warning ⚠ Warning ⚠**

### **THINK SAFETY !**

- NEVER USE A HEATER IN YOUR AMERISTEP® BLIND - UNVENTED FUMES COULD CAUSE SICKNESS OR DEATH
- NEVER EXPOSE YOUR BLIND TO ANY OPEN FLAME. THIS PRODUCT IS NOT FIREPROOF
- NEVER SHOOT THROUGH THE TSC WINDOWS WITH A FIREARM SPARKS OR FLAME FROM THE MUZZLE COULD IGNITE THE MATERIAL
- NEVER SHOOT EXPANDABLE BROADHEADS THROUGH THE TSC WINDOWS - THE MESH MAY CAUSE PREMATURE OPENING OF THE BLADES. USE FIXED BLADE BROADHEADS ONLY
- FOR BEST ARROW FLIGHT THRU TSC WINDOWS, ALIGN BROADHEAD BLADES WITH FLETCHING
- NEVER ALLOW CHILDREN TO PLAY WITH THIS PRODUCT WITHOUT ADULT SUPERVISION
- NEVER ALLOW MATERIAL TO COVER YOUR FACE. IT CAN CAUSE SUFFOCATION AND DEATH
- NEVER ALLOW ANYONE TO USE LIGHTED CANDLES, MATCHES OR OTHER SOURCES OF FIRE NEAR THIS PRODUCT
- ALSO AVAILABLE IS OUR BLAZE ORANGE TANGLE® SAFETY CAP (Sold Separately)
- **UV (ULTRAVIOLET LIGHT) WARNING:**  
Ultraviolet light breaks down lightweight fabric fibers (and almost any synthetic material). The material will fade (discolor), lose strength and eventually disintegrate if left in prolonged sunlight. To extend the life of your Ameristep® product avoid leaving it out in direct sunlight. Set up your portable ground blind or accessory in a shady spot whenever possible to extend the product life.
- **! CHOKING HAZARD - MAGNETS ENCLOSED.** Keep Small Parts Away From Children. Do Not Ingest or Inhale Magnets. Attraction of Magnets in the Body May Cause Serious Injury and Require Immediate Medical Care.